


**INDICATOR POST**  
(Refer to WSCM C12 Drg. 91-0061-01)

Only "AUTHORISED" items shall be used in the Sewer System.


**NOTES:**

- For sites in roadways with kerbs, locate the appropriate sign as shown above, and:-
  - clear of all services
  - opposite the stop valve, or pump-out branch etc. as applicable, on an alignment at right angles to the sewage pumping main
  - on the 'pumping main' side of the road.
- Where no kerb and water table exists, locate the sign as detailed in Note 1 above, and at an appropriate distance off the road edge suitable for each site.
- In easements, locate the sign as detailed in Note 1 above, and at a distance of 600mm inside the edge of the easement.
- For details of available fittings, refer to SA Water catalogues of "Authorised Items for Sewer Systems" and/or "Authorised Items for Water Supply Reticulation Systems".

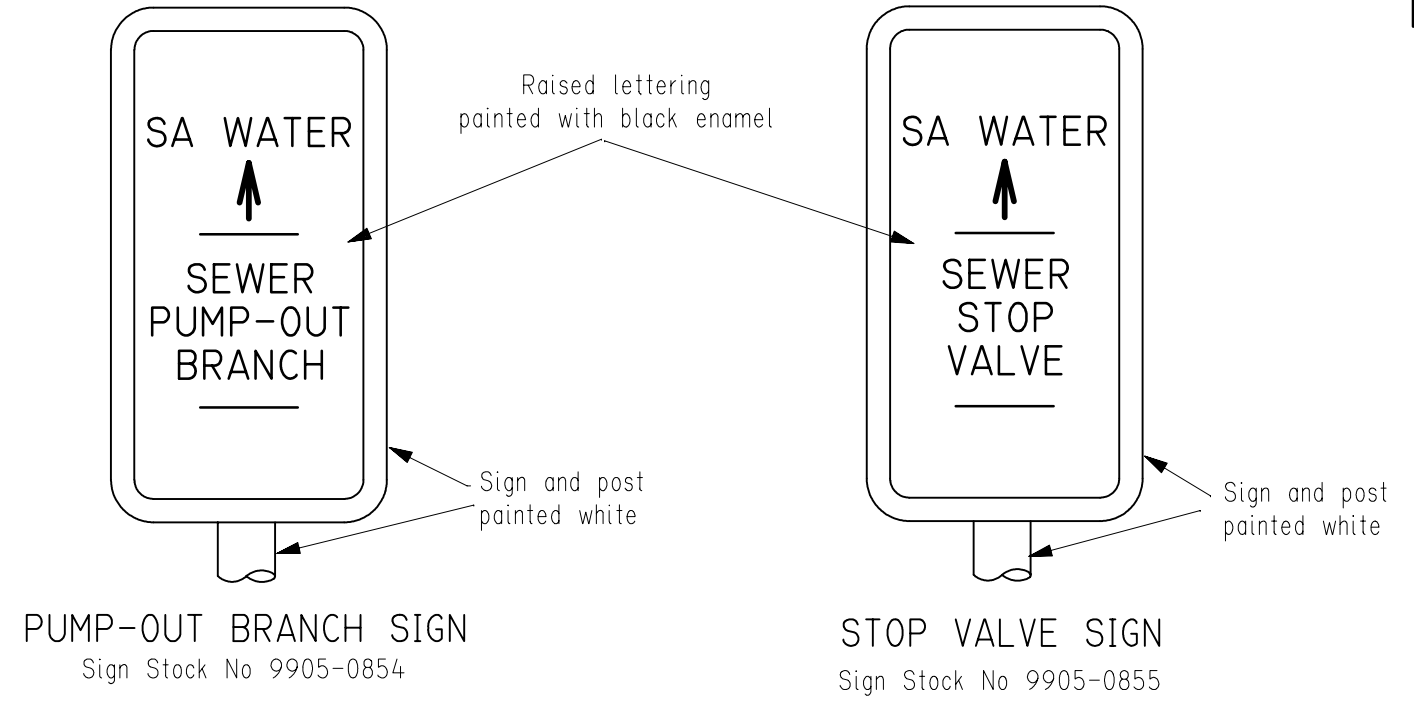

**PUMP-OUT BRANCH SIGN**  
Sign Stock No 9905-0854

**STOP VALVE SIGN**  
Sign Stock No 9905-0855

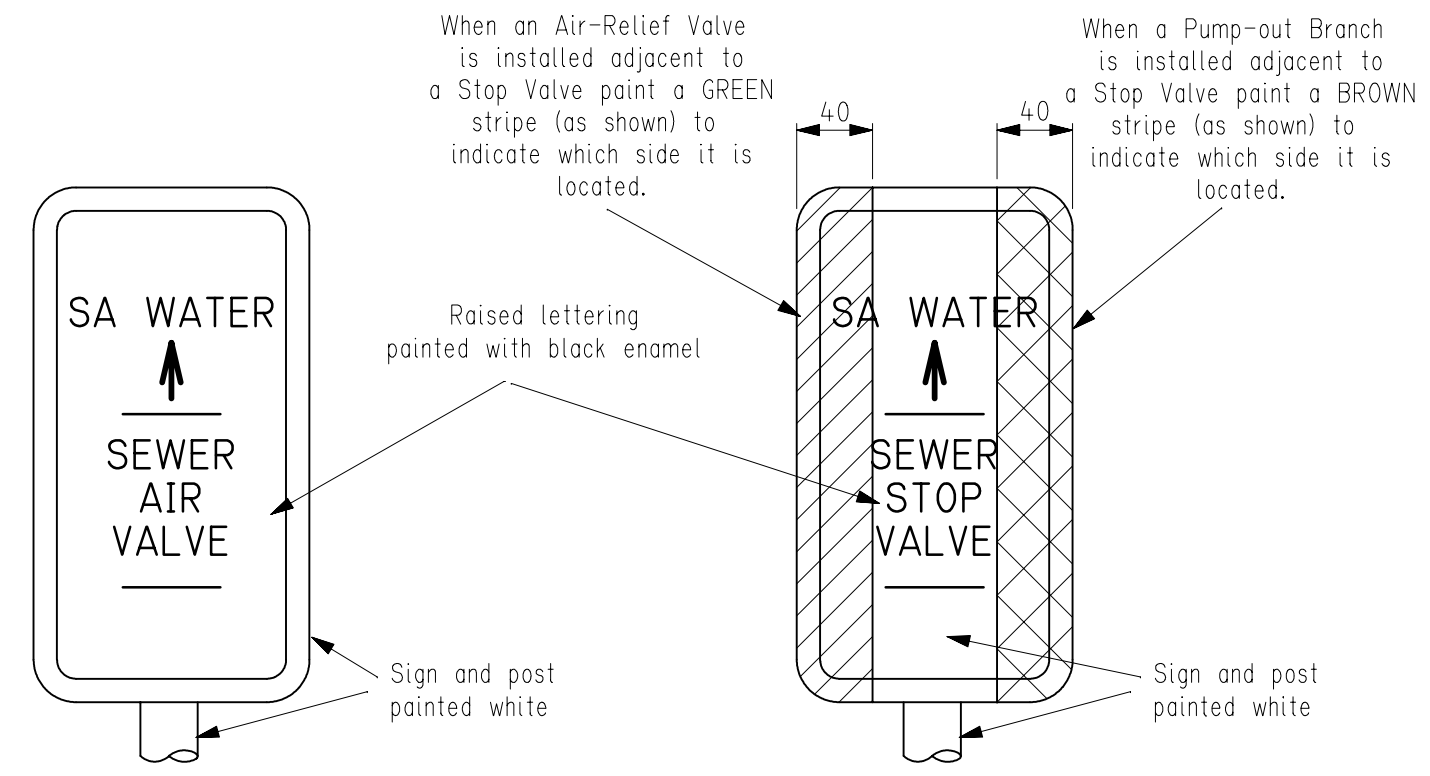

**AIR-RELIEF VALVE SIGN**  
Sign Stock No 9905-0856

**COMBINATION SIGN**  
AIR-RELIEF VALVE /  
STOP VALVE / PUMP-OUT BRANCH

Chg		Amendment - 9-1-97	Des	JIS		R.M.Jones Executive Manager 6 / 1 / 97 ENGINEERING GROUP
Drn			Drn	CLS		
Ckd			Exm			
Unit Ldr.			Unit Ldr.			

SOUTH AUSTRALIAN WATER CORPORATION



SEWER CONSTRUCTION MANUAL PAGE M19  
INDICATOR POST AND SIGNS  
FOR SEWAGE PUMPING MAINS

© This drawing is the property of the South Australian Water Corporation and shall not be copied without permission.