

**SECTION**    **B**

**TABLE OF CONTENTS**

**SECTION**

**CONTENTS**

|   |   |
|---|---|
| A | PREFACE.  |
| B | CONTENTS AND INDEX                              |
| C | GENERAL INFORMATION.                            |
| D | ALLOCATION OF SPACE FOR SERVICES.               |
| E | REFERENCES.                                     |
| F | CORROSION PROTECTION.                           |
| G | EXCAVATION, EMBEDMENT AND TRENCH FILL.          |
| H | PIPE LAYING.                                    |
| J | VENTS.  |
| K | CONNECTIONS.                                    |
| L | MAINTENANCE STRUCTURES AND INSPECTION OPENINGS. |
| M | STANDARDS SUBMERSIBLE SEWAGE PUMPING STATIONS.  |
| N | QUICK REFERENCE                                 |

**SECTION B**  
B1**SECTION C**

| <u>PAGE</u> | <u>DRAWING NO.</u> |
|-------------|--------------------|
| C1          | 96 - 0180 - 01     |
| C2          | 96 - 0180 - 02     |

**SECTION D**

| <u>PAGE</u> | <u>DRAWING NO.</u> |
|-------------|--------------------|
| D1          | 91 - 0084 - 01A    |
| D2          | 91 - 0084 - 02C    |
| D3          | 91 - 0084 - 03     |
| D4          | 91 - 0084 - 04     |

**SECTION E**

| <u>PAGE</u> | <u>DRAWING NO.</u> |
|-------------|--------------------|
| E1          | 96 - 0180 - 03     |
| E2          | 96 - 0180 - 04     |

**SECTION F**

| <u>PAGE</u> | <u>DRAWING NO.</u> |
|-------------|--------------------|
| F1          | 96 - 0180 - 05     |

**SECTION G**

| <u>PAGE</u> | <u>DRAWING NO.</u> |
|-------------|--------------------|
| G1          | 02 - 0296 - 01     |
| G2          | 02 - 0156 - 01     |
| G3          | 02 - 0157 - 01     |

**SECTION H**

| <u>PAGE</u> | <u>DRAWING NO.</u> |
|-------------|--------------------|
| H1          | 96 - 0059 - 01     |
| H2          | 96 - 0059 - 02     |
| H3          | 02 - 0288 - 01     |

**SECTION J**

| <u>PAGE</u> | <u>DRAWING NO.</u> |
|-------------|--------------------|
| J1          | 94 - 0168 - 01     |
| J2          | 94 - 0168 - 02     |
| J3          | 94 - 0168 - 03A    |

**SECTION K**

| <u>PAGE</u> | <u>DRAWING NO.</u> |
|-------------|--------------------|
| K1          | 94 - 0164 - 01A    |
| K2          | 94 - 0164 - 02A    |
| K3          | 94 - 0164 - 03A    |
| K4          | 94 - 0164 - 04A    |
| K5          | 94 - 0164 - 05A    |
| K6          | 94 - 0164 - 06A    |
| K7          | 94 - 0164 - 08A    |
| K8          | 94 - 0164 - 09A    |

**CONTENTS AND INDEX**  
Index**GENERAL INFORMATION**

| <u>TITLE</u>   |
|--|
| Underground Services, Protection of Existing Trees/Environment & Dewatering. |
| Shoring of Excavations & Use of Explosives.                                  |

**ALLOCATION OF SPACE FOR SERVICES**

| <u>TITLE</u>  |
|---|
| Allocation of Space for Services in New Land Divisions - Sheet 1. |
| Allocation of Space for Services in New Land Divisions - Sheet 2. |
| Road Traffic Information Sheet 1.                                 |
| Road Traffic Information Sheet 2.                                 |

**REFERENCES**

| <u>TITLE</u>   |
|--|
| Australian Standards, SA Water Specifications, Department of Transport specifications. |
| List of References and Regulations.  |

**CORROSION PROTECTION**

| <u>TITLE</u>         |
|----------------------|
| General Information. |

**EXCAVATION, EMBEDMENT & TRENCH FILL**

| <u>TITLE</u>   |
|--|
| Installation of Sewer Pipes  |
| Trench Excavation & Embedment of Sewers using 10-7 mm Screenings         |
| Reinstatement of Road Pavement, Hard Shoulders & Verges in Road Reserves |

**PIPE LAYING**

| <u>TITLE</u>                                |
|---|
| Water Seals in Branch Sewers                |
| Pumping Main Discharge into Access Chamber. |
| Railway Crossings.                          |

**VENTS**

| <u>TITLE</u>   |
|--|
| Siting and Spacing of Induct and Educt Vents for Trunk Sewers. |
| General Arrangement of DN 300 Induct Vents off Trunk Sewers.   |
| General Arrangement of DN 300 Educt Vents.                     |

**CONNECTIONS**

| <u>TITLE</u>                               |
|--|
| Connection Locations.                      |
| Inspection Point Details.                  |
| Single Connections.                        |
| 'Y' Connections.                           |
| Connections with Riser off UPVC Sewer.     |
| Connections with 'Jump Up' at Boundary IP. |
| Connections with Intermediate Riser.       |
| Connections Through Embankment.            |

**SECTION K**

| <u>PAGE</u> | <u>DRAWING NO.</u> |
|-------------|--------------------|
| K9          | 94 - 0164 - 16A    |
| K10         | 94 - 0164 - 10A    |
| K11         | 94 - 0164 - 11A    |
| K12         | 94 - 0162 - 01C    |
| K13         | 94 - 0161 - 01C    |
| K14         | 94 - 0160 - 01C    |

**SECTION L**

| <u>PAGE</u> | <u>DRAWING NO.</u> |
|-------------|--------------------|
| L1          | 94 - 0167 - 01     |
| L2          | 94 - 0167 - 02     |
| L3          | 94 - 0167 - 03     |
| L4          | 94 - 0167 - 04     |
| L5          | 94 - 0167 - 05A    |
| L6          | 94 - 0167 - 06A    |
| L7          | 94 - 0167 - 07     |
| L8          | 94 - 0167 - 08     |
| L9          | 94 - 0167 - 09     |
| L10         | 94 - 0167 - 10     |
| L11         | 94 - 0167 - 11     |
| L12         | 94 - 0167 - 12     |
| L13         | 94 - 0167 - 13     |
| L13A        | 99 - 0114 - 01     |
| L13B        | 99 - 0115 - 01     |
| L14         | 94 - 0167 - 14     |
| L15         | 94 - 0167 - 15     |
| L16         | 02 - 0289 - 01     |
| L17         | 02 - 0290 - 01     |
| L18         | 02 - 0291 - 01     |

**SECTION M**

| <u>PAGE</u> | <u>DRAWING NO.</u> |
|-------------|--------------------|
| M1          | 94 - 0163 - 01     |
| M2          | 94 - 0163 - 02     |
| M3          | 94 - 0163 - 03     |
| M4          | 94 - 0163 - 04     |
| M5          | 94 - 0163 - 05     |
| M6          | 94 - 0163 - 06     |
| M7          | 94 - 0163 - 07     |
| M8          | 94 - 0163 - 08     |
| M9          | 94 - 0163 - 09     |
| M10         | 94 - 0163 - 10     |
| M11         | 94 - 0163 - 11     |
| M12         | 94 - 0163 - 12     |
| M13         | 94 - 0163 - 13     |
| M14         | 94 - 0163 - 14     |
| M15         |                    |
| M16         | 94 - 0163 - 16     |
| M17         | 94 - 0163 - 17     |
| M18         | 94 - 0163 - 18     |
| M19         | 94 - 0163 - 19     |

**SECTION N**

| <u>PAGE</u> |
|-------------|
| N1          |
| N2          |

**CONNECTIONS (Continued)**

| <u>TITLE</u>  |
|---|
| Connections Left/Right into Access Chambers with/without Large Jump Up. |
| Connections 'Ahead' into Access Chambers with or without Large Jump-Up. |
| Water Seals on Connections.   |
| Connections off DN 375 and Larger VC and RCRJ Trunk Sewers.             |
| Connections off Existing DN 150, 225 and 300 VC Sewers.                 |
| Connections off Existing DN 150, 225 and 300 UPVC Sewers.               |

**MAINTENANCE STRUCTURES & INSPECTION OPENINGS**

| <u>TITLE</u>  |
|---|
| General Notes.  |
| Access Chamber and Inspection Opening Locations in Roadways & Easements DN 150 Inspection Openings. |
| Typical Construction Details for 900 Internal Diameter Access Chamber.                              |
| Typical Construction Details for 1050 Internal Diameter Access Chamber.                             |
| Typical Construction Details for 1200 Internal Diameter Access Chamber.                             |
| Construction Details for 1400 Internal Diameter Access Chamber with Conical Top.                    |
| Typical Construction Details for 1500 Internal Diameter 'Control' Access Chamber.                   |
| Bench and Channel Details in Access Chambers for Sewers up to DN 600.                               |
| Channel Configurations in Access Chambers for Sewers up to DN 600                                   |
| Access Chamber with 150 DN External Jump Up.  |
| Access Chamber with 150 DN Internal Sewer Jump Up.  |
| Trunk Sewer Access Chamber for 675 and 750 Sewers.  |
| Trunk Sewer MH for DN 450 and Larger Sewers Utilising "Lost Formwork".                              |
| Trunk Sewer MH for DN 450 and Larger Sewers Straight Through Only.                                  |
| Lightweight Access Chamber for use in Easements with Restricted Access.                             |
| Height and Cross-fall Adjustment Details for Access Chamber Slabs                                   |
| Maintenance Shafts Installation   |
| Maintenance Shafts with Variable Bends  |
| Terminal Maintenance Shafts and Connections   |

**STANDARD SUBMERSIBLE SEWAGE PUMPING STATIONS**

| <u>TITLE</u>   |
|--|
| Site Arrangement   |
| Standard Notes Sheet 1.  |
| Standard Notes Sheet 2.  |
| Standard Notes Sheet 3.  |
| Site Arrangement and Access Where Station Abuts a Public Road.                   |
| Site Arrangement and Access Road Where Station Does Not Abut a Road.             |
| Plan and Section.  |
| Electrical Cubicle, Base and Conduit Details.                                    |
| ETSA Service and Telemetry Details Including Trench-fill for Electrical Conduits |
| Fence Detail (Typical).  |
| DN 40 Water Service  |
| Access Roadway, Cross Section and Drainage Details (Typical).                    |
| Typical Arrangement for Valve Chamber (Non-Trafficable).                         |
| Typical Arrangement for Valve Chamber With Flow Meter (Non-Trafficable).         |
| To be Issued   |
| In-Line Stop Valve Assembly for DN 100 to DN 200 Sewage Pumping Mains            |
| Pump-out Branch for Sewage Pumping Mains   |
| Air Relief Valves for Sewage Pumping Mains                                       |
| Indicator Post and Signs for Sewage Pumping Mains                                |

**QUICK REFERENCE**

| <u>TITLE</u>           |
|------------------------|
| Quick Reference A - I. |
| Quick Reference J - Z. |