

ENLARGEMENT  
SA WATER CONNECTIONS AREA

LOCATION OF CONNECTIONS

WATER CONNECTIONS

Standard 'default' position is as shown.  
Alternative position may be specified on design drawing.

SEWER CONNECTIONS


Standard positions as shown on Page K1 of Sewer Construction Manual shall be used unless obstructions or existing drains warrant alternative location.

'Y' connections at common boundary (as shown) are preferred and shall be used where allotment crossfall is less than 600mm.

Single connections shall be used where allotment crossfall is greater than 600mm or for connecting to only one allotment.

Single connections shall be on low side of allotment unless it is impractical - then depth shall be deeper to compensate for crossfall.

See ENLARGEMENT  
SA WATER CONNECTIONS AREA

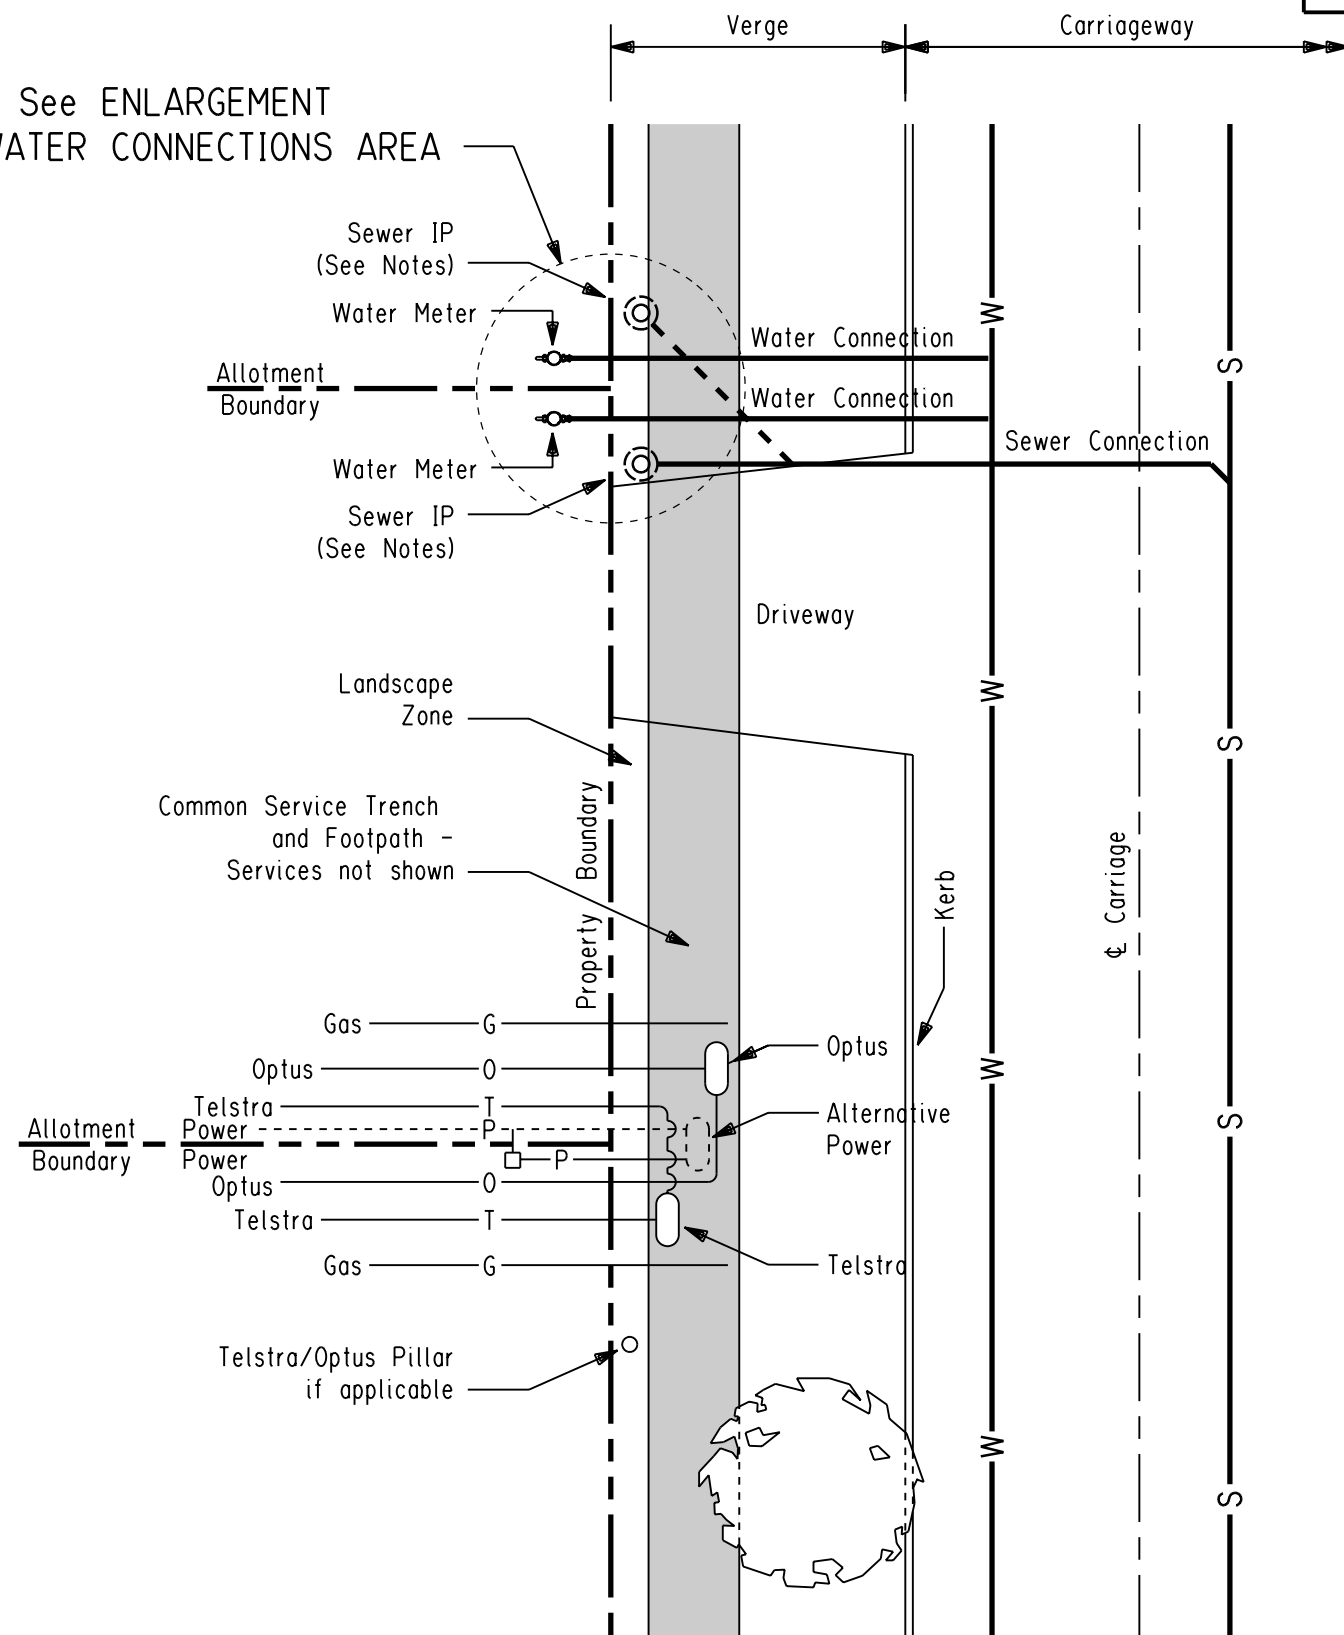

NOTE :  
Services in Common Trench not shown

THIS DRAWING SUPERSEDES DRG 91-0084-02 B

Chg	C	Amendment -	Des		AMENDMENT AUTHORIZATION signed <b>G R ROSSER</b> for Gen. Man. E&P 1/7/03 ENGINEERING & PROJECTS	<b>SOUTH AUSTRALIAN WATER CORPORATION</b>  	WATER SUPPLY CONSTRUCTION MANUAL PAGE D2 & SEWER CONSTRUCTION MANUAL PAGE D2 ALLOCATION OF SPACE FOR SERVICES IN LAND DIVISIONS TYPICAL DIMENSIONS - SHEET 2	Not to Scale
Drn	WG	Standard "default" location of Water Connection changed.	Drn					EWS 4561/91
Ckd	GRR		Exm	D.B.C.				91-0084-02 C
Unit Ldr.			Unit Ldr.	D.B.C.				
© This drawing is the property of the South Australian Water Corporation and shall not be copied without permission.								